


Back Mesh Panel Installation

Mesh back panels can be attached at any time after the bay has been assembled.

1. Push the arrow tip of the cable tie through the hole on the back of the upright.
2. Position the mesh as required and loop the tie around the outer wire of the mesh.
3. Repeat the process along the whole height of the bay and on both sides of the mesh. Use as many ties as required - approx 2-3 ties per meter per side. To cover the whole back of the bay, you will need to use 2 or more mesh panels and use basic cable ties to join the panels together.
4. To prevent goods falling off at the back behind the shelf and the mesh, push the black clip onto the edge of the shelf and run through another cable tie to connect the clip and the back mesh. Use the clip on every 2nd shelf.

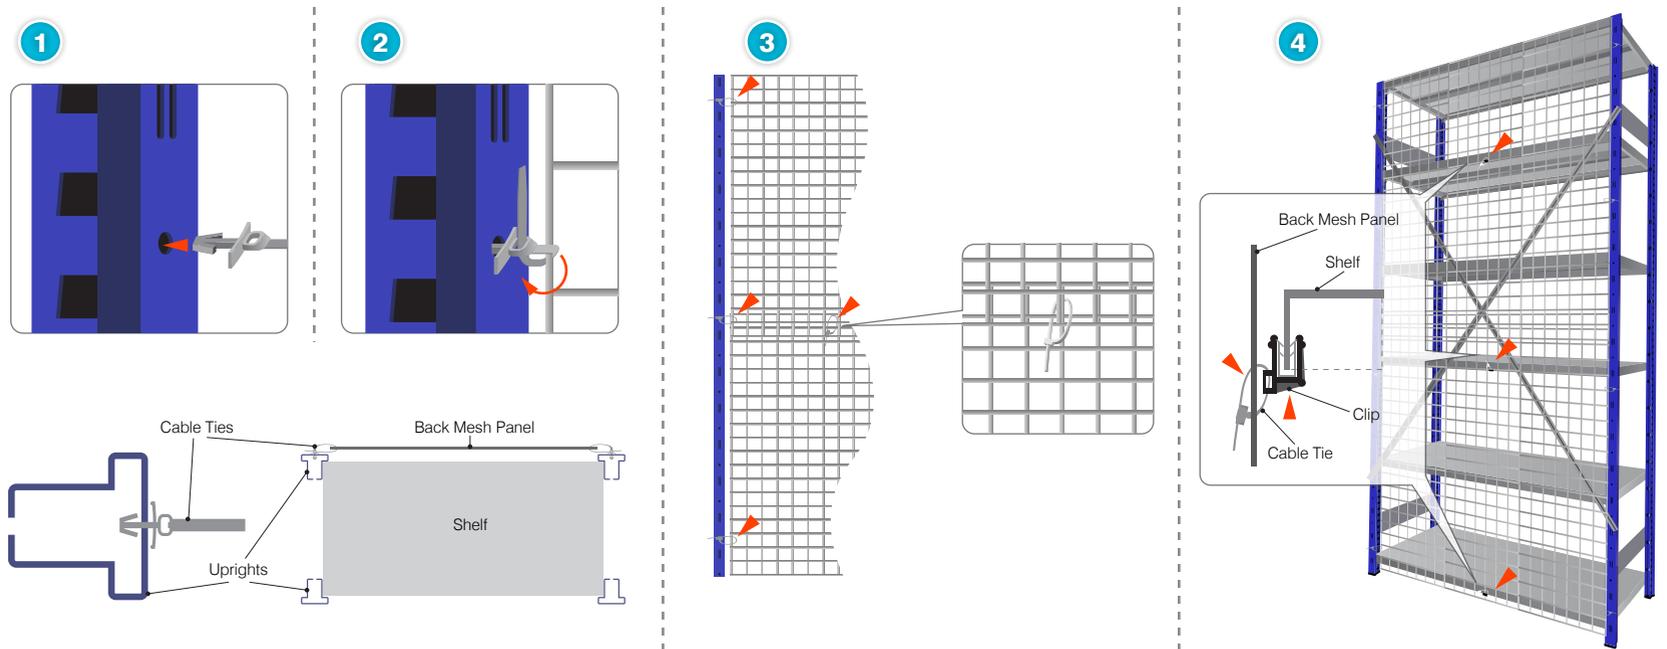

Hook-in Back Cladding Installation

Depending on the height of the bay, use a combination of 400 and 500 mm tall panels. Do not use any bracing on bays with hook-in back cladding.

1. Place the first back cladding panel to the back of the bay by inserting the hooks on the panel to the vertical slots at the back of each upright. The first panel is situated 100mm off the floor.
2. Continue placing the other panels from the bottom up, on top of each other.
3. Insert the U Clip to both uprights just above the top hook of the top back panel to prevent the panels being accidentally knocked out.

