



1




2

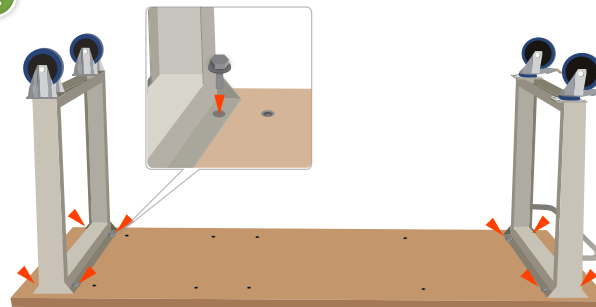



3

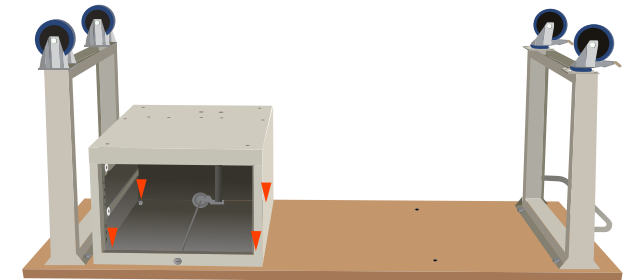


Positions for frames(legs)

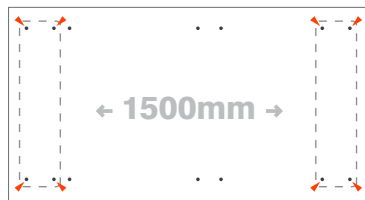

Position for suspended drawer

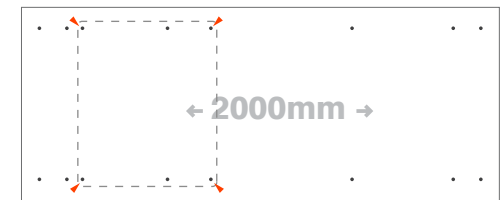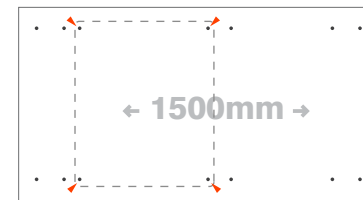

4

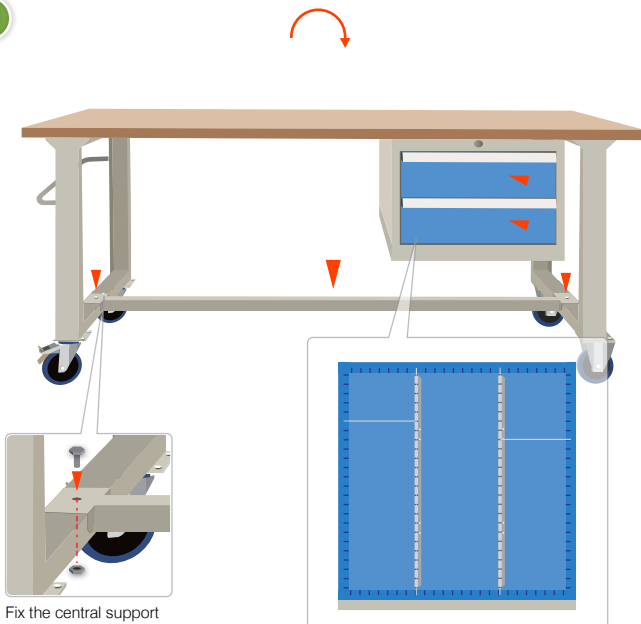


Fix the central support

*Dividers are installed into the drawer slots


Loading capacities

Workbenches



← 2000mm →

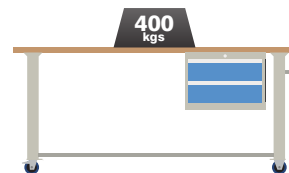

← 1500mm →

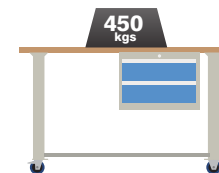

Drawers



1. Place the worktop on the floor, the fitting side up.
2. Attach the frames (legs) to the worktop using M10 bolts with washers, tighten with 17mm spanner.
3. Take the drawers out of the drawer cabinet and place it on top of the worktop (upside down) - matching the bolting positions on the worktop and the holes inside the cabinet. Attach the cabinet using M10 bolts and tighten with 17mm spanner.
4. Turn the assembled workbench on its feet and install the central support - secure with 2x M8 nuts and bolts, tighten with 13mm spanner. Insert the drawers back into the cabinet.

*optional drawer dividers can be installed at this point

Tools Required

17mm & 13mm Spanner

Safety Precaution

Two competent people wearing **safety gloves**, **safety shoes** and **protective eyewear** are recommended to undertake the assembly.



scan for more info